HOME
DECORATORS
COLLECTION

BF-25326 FREMONT MIRROR WALL CABINET

INV#29442

ASSEMBLY INSTRUCTIONS

Made In China

MAX LOAD: 30LBS

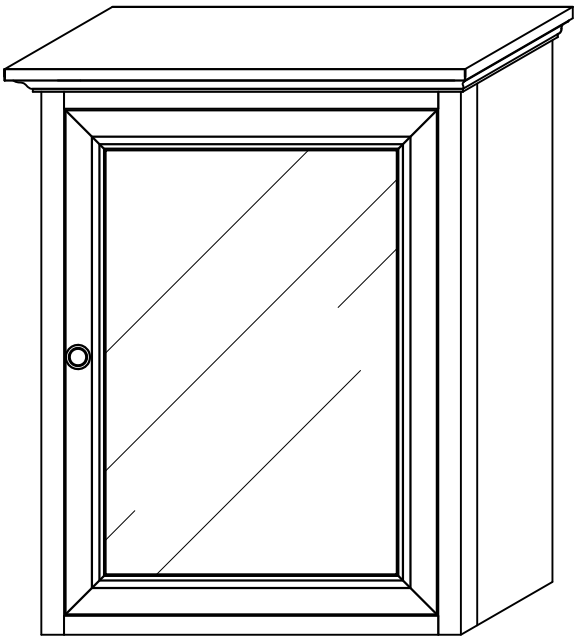

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment.Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Custormer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

STRUCTURAL DIAGRAM

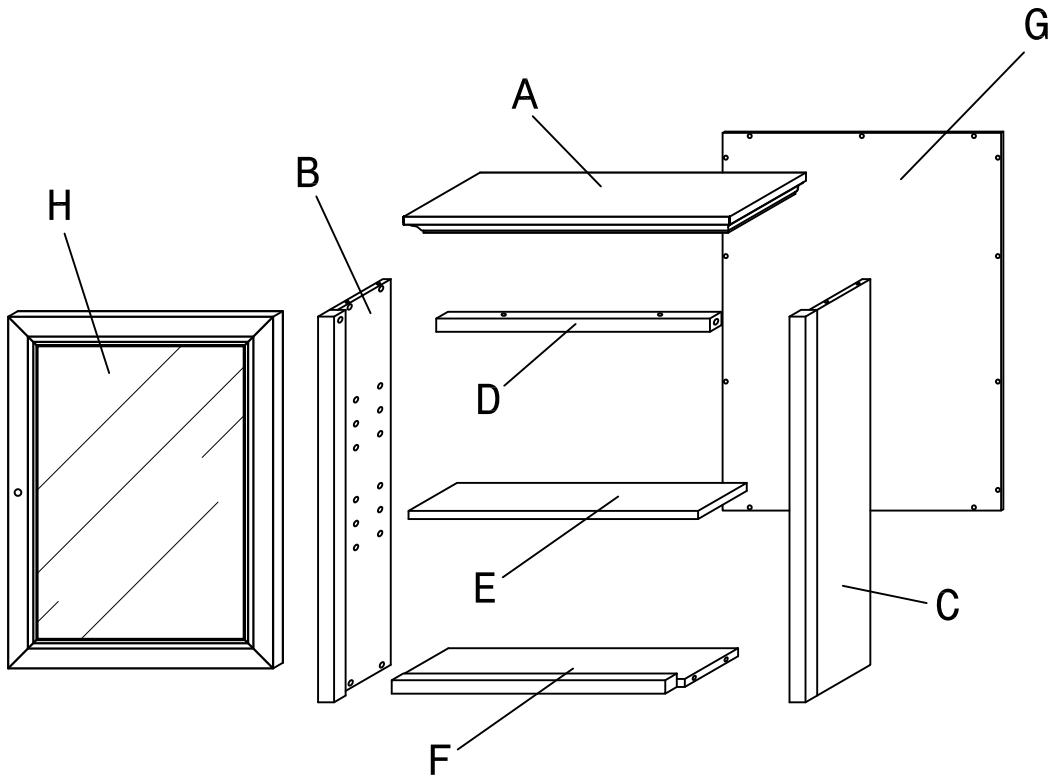

PARTS LIST

A TOP PANEL-1PC	B LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC	D  ADORNING PANEL-1PC
E  SHELVES-2PCS	F  BOTTOM PANEL-1PC	G 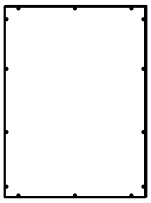 BACK PANEL-1PC	H 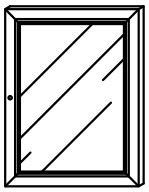 DOOR-1PC
I CAM-TOOL-1PC	J 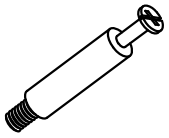 CAM-BOLTS-10PCS	K CAM-LOCKS-10PCS	L 7mm × 5/8"  SCREWS-14PCS
M  HINGES-2PCS	N 7mm × 5/8" SCREWS-12PCS	O  HANDLE-1PC	P 8mm × 5/8" SCREW-1PC
Q SHELF SUPPORTS-8PCS	R  MAGNET-1PC	S 6mm × 5/8"  SCREWS-5PCS	T  SHEETIRONS-2PCS

U 7mm × 7/8"  SCREWS-5PCS	V GECKOS-5PCS	W 8mm × 1" 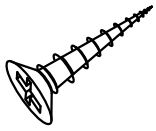 SCREWS-2PCS	X  FEMALE MAGNET-1PC
Y 5mm × 1/2" SCREW-1PC	Z EVA MATS-2PCS	A1 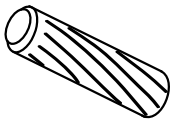 DOWELS-2PCS	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

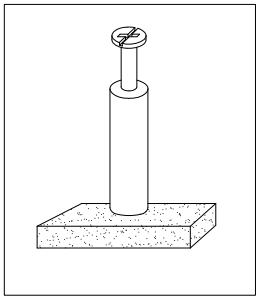

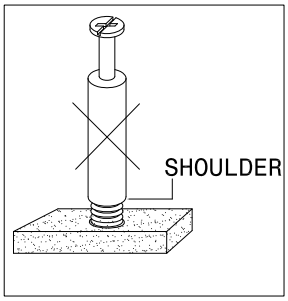

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

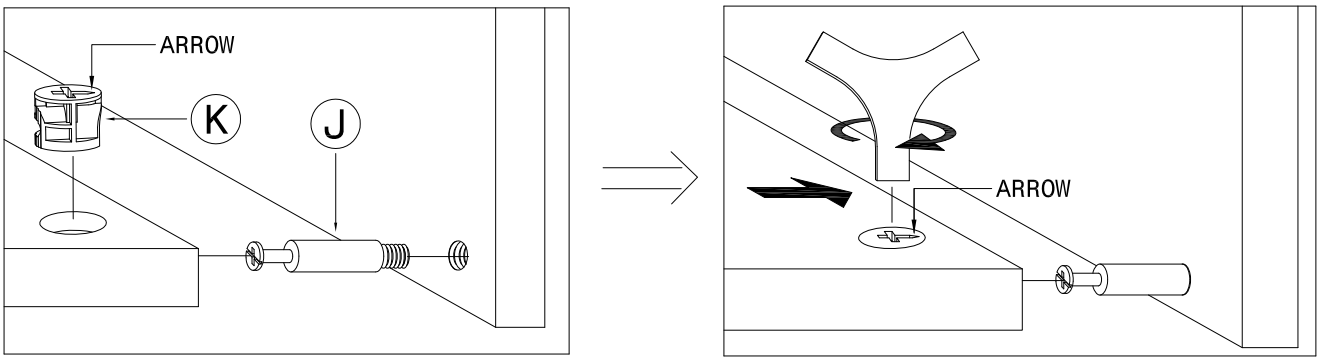

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

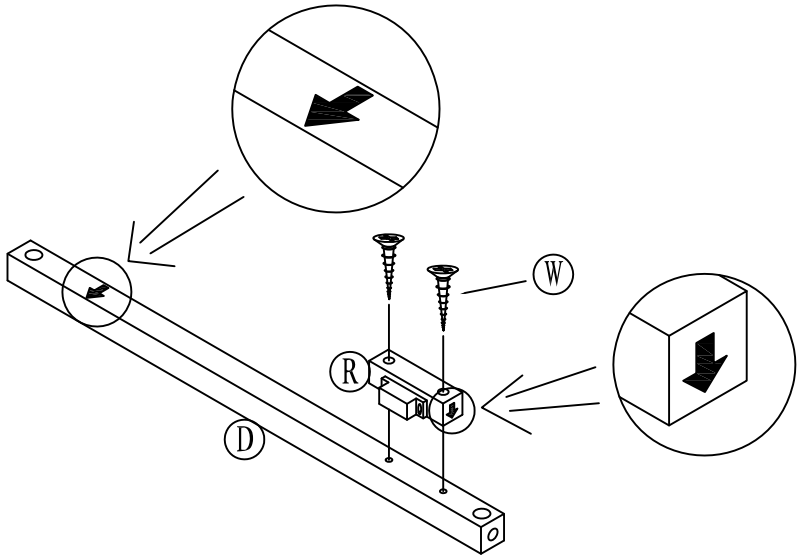

1). ASSEMBLE THE MAGNET(R).

- ATTACH THE MAGNET(R) TO ADORNING PANEL(D) USING 2 SCREWS(W).

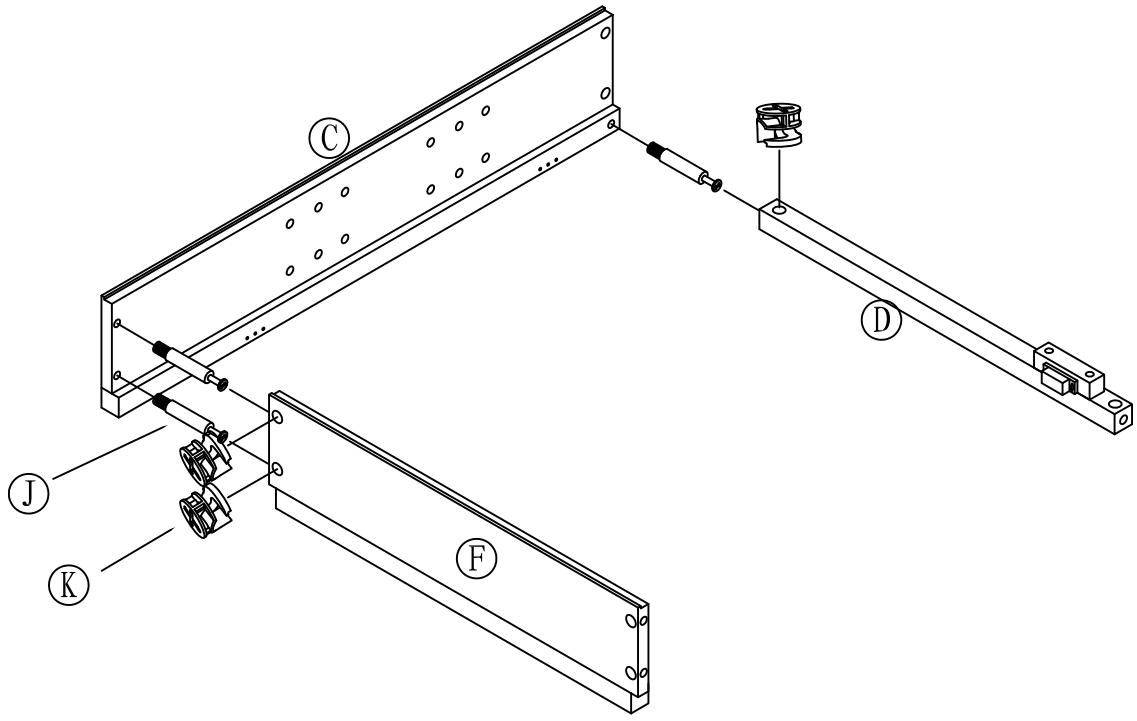

2). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 3 CAM-BOLTS(J) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE THE CAM-BOLTS(J) INTO THE HOLES IN THE PANEL(D/F) AND ATTACH USING 3 CAM-LOCKS(K).

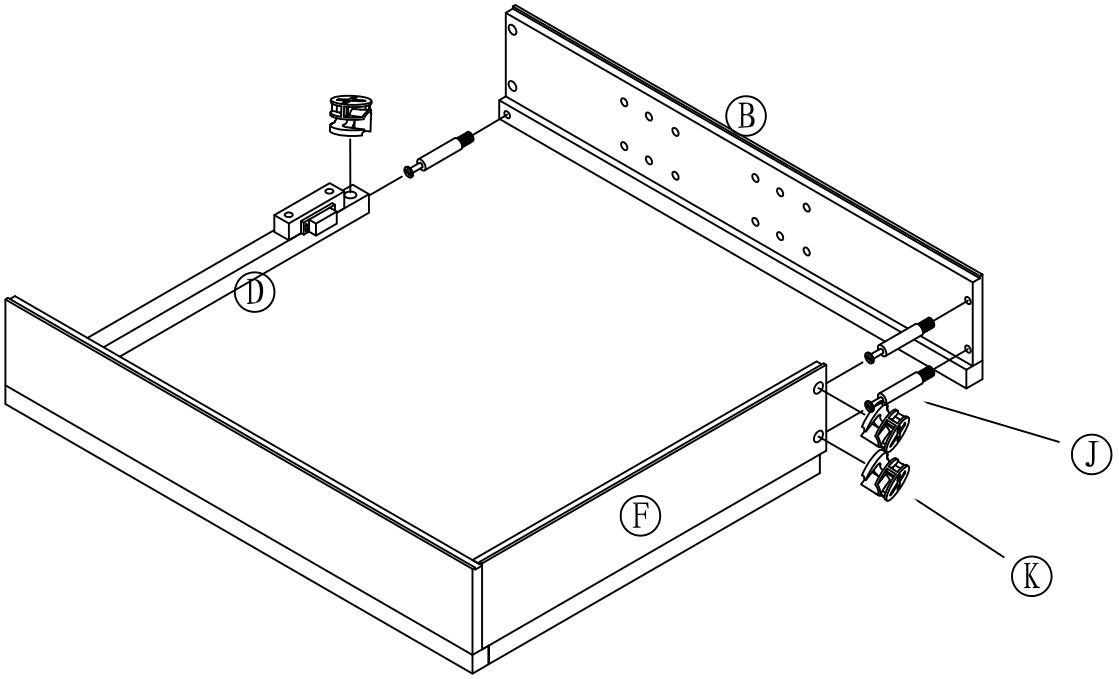

3). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 3 CAM-BOLTS(J) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE THE CAM-BOLTS(J) INTO THE HOLES IN THE PANEL(D/F) AND ATTACH USING 3 CAM-LOCKS(K).

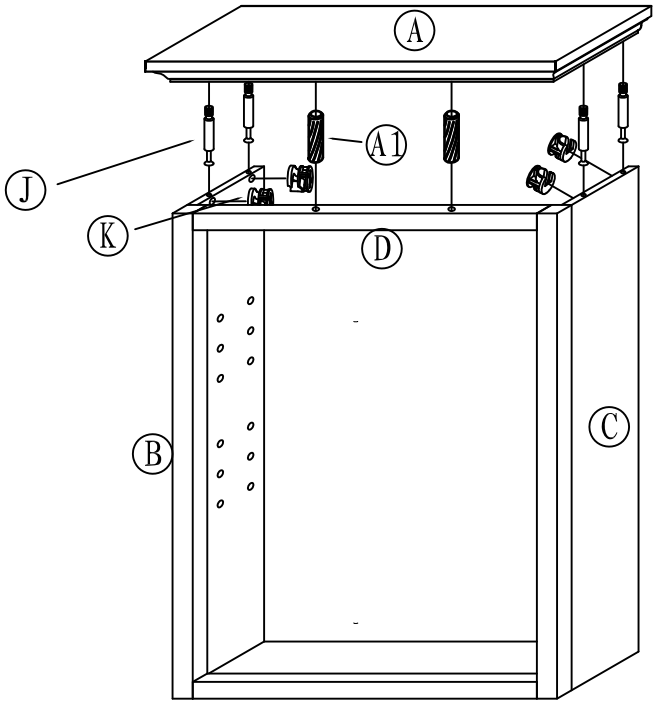

4). ASSEMBLE THE TOP PANEL(A).

- INSERT 2 DOWELS(A1) INTO THE HOLES IN THE ADRNING PANEL(D).
- ROTATE 4 CAM-BOLTS(J) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE THE CAM-BOLTS(J) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(K).

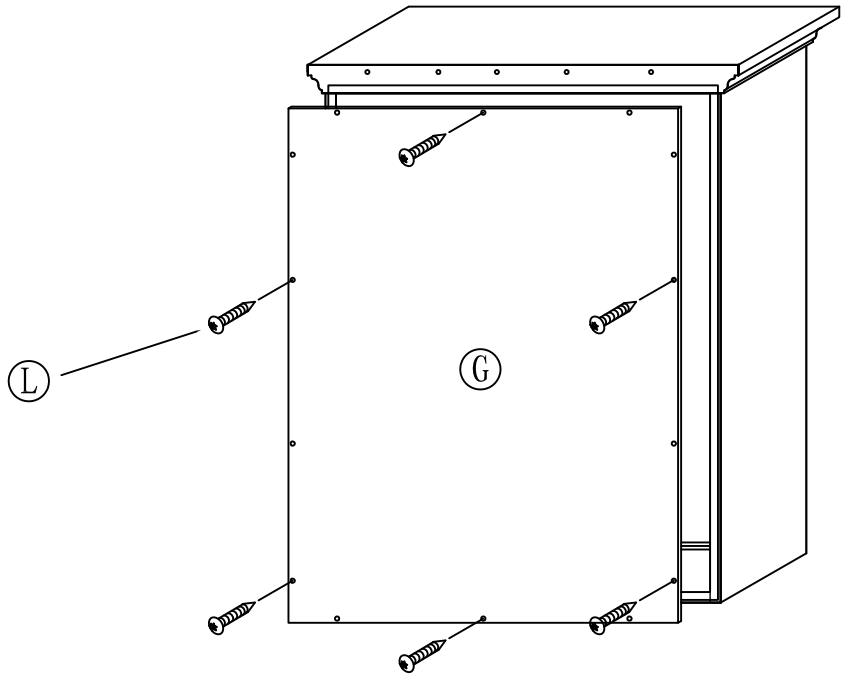

5). ASSEMBLE THE BACK PANEL(G).

- ATTACH THE BACK PANEL(G) USING 14 SCREWS(L).

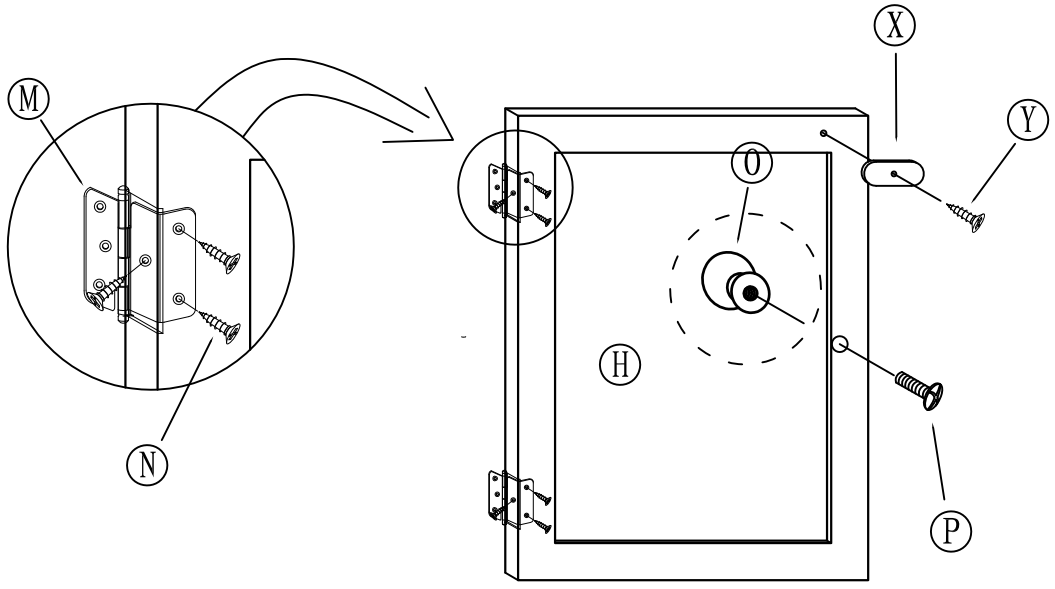

6). ASSEMBLE THE DOOR(H).

- ATTACH THE FRMALE MAGNET(X) TO DOOR(H) USING 1 SCREW(Y).
- ATTACH THE HANDLE(O) TO DOOR(H) USING 1 SCREW(P).
- ATTACH THE HINGES(M) TO DOOR(H) USING 6 SCREWS(N).

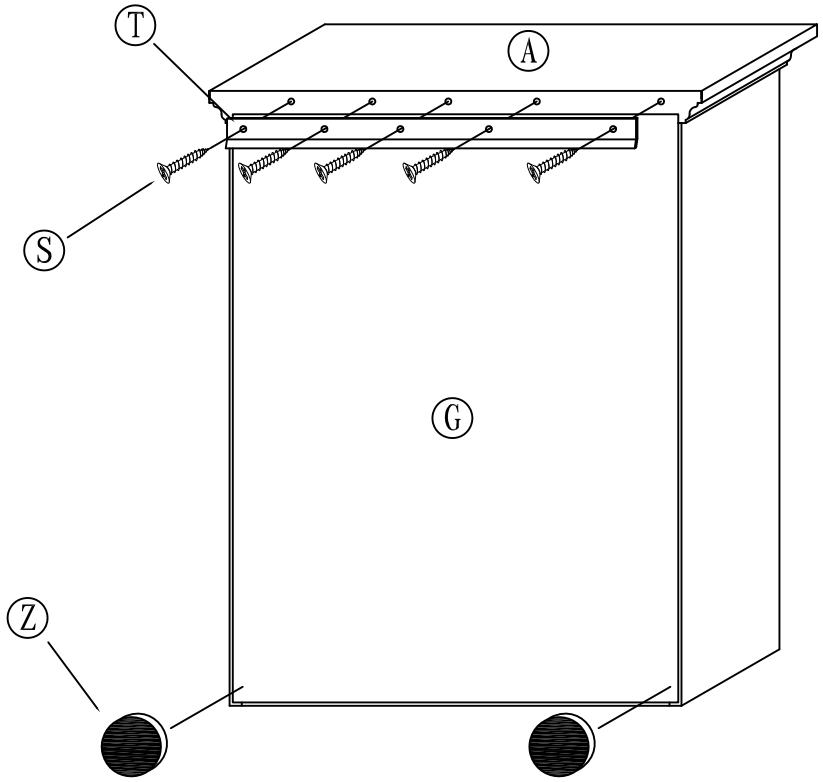

7). ASSEMBLE THE SHEETIRON(T).

- ATTACH THE SHEETIRON(T) TO TOP PANEL(A) USING 5 SCREWS(S).
- ATTACH THE EVA MATS(Z) TO BACK PANEL(G).

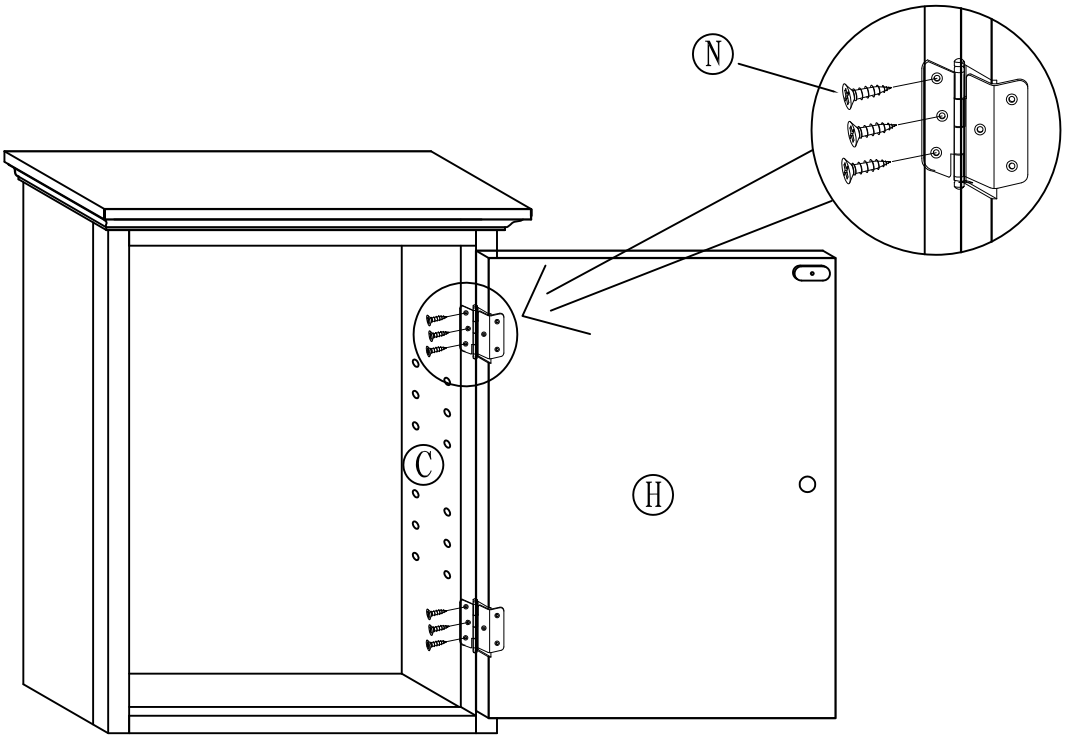

8). ASSEMBLE THE DOOR(H).

- ATTACH THE DOOR(H) TO RIGHT SIDE PANEL(C) USING 6 SCREWS(N).

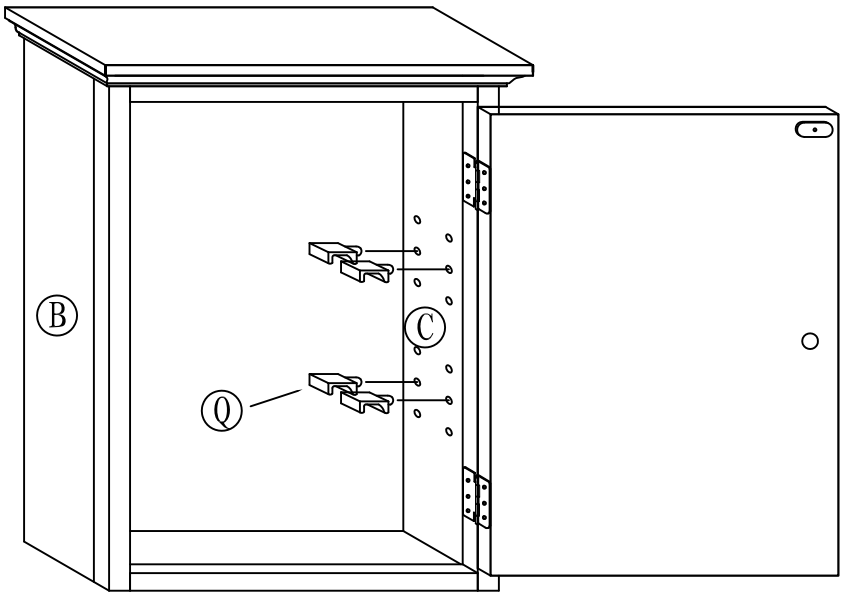

9). ASSEMBLE THE SHELF SUPPORTS(Q).

- INSERT 8 SHELF SUPPORTS(Q) INTO THE HOLES IN THE SIDE PANEL(B/C).

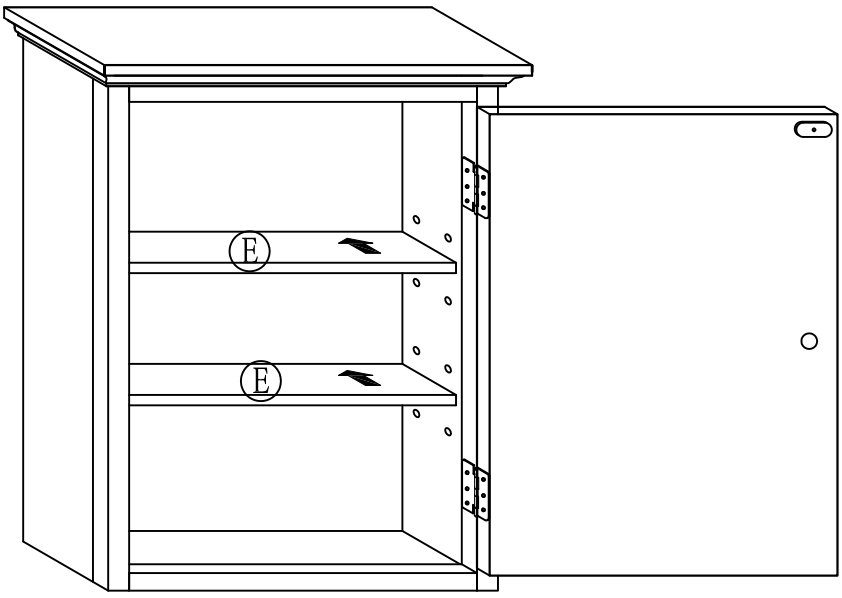

10). ASSEMBLE THE SHELVES(E).

- PUT THE SHELVES(E) ONTO THE SHELF SUPPORTS(Q).

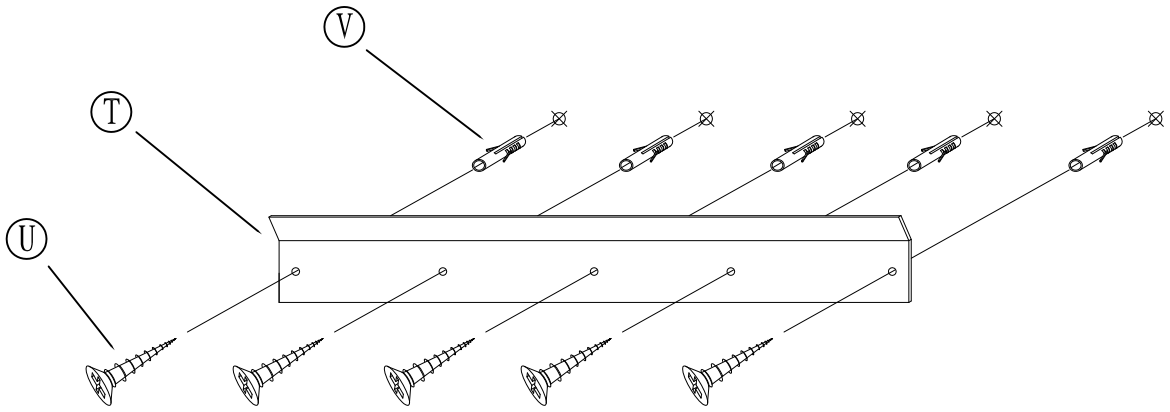

WALL

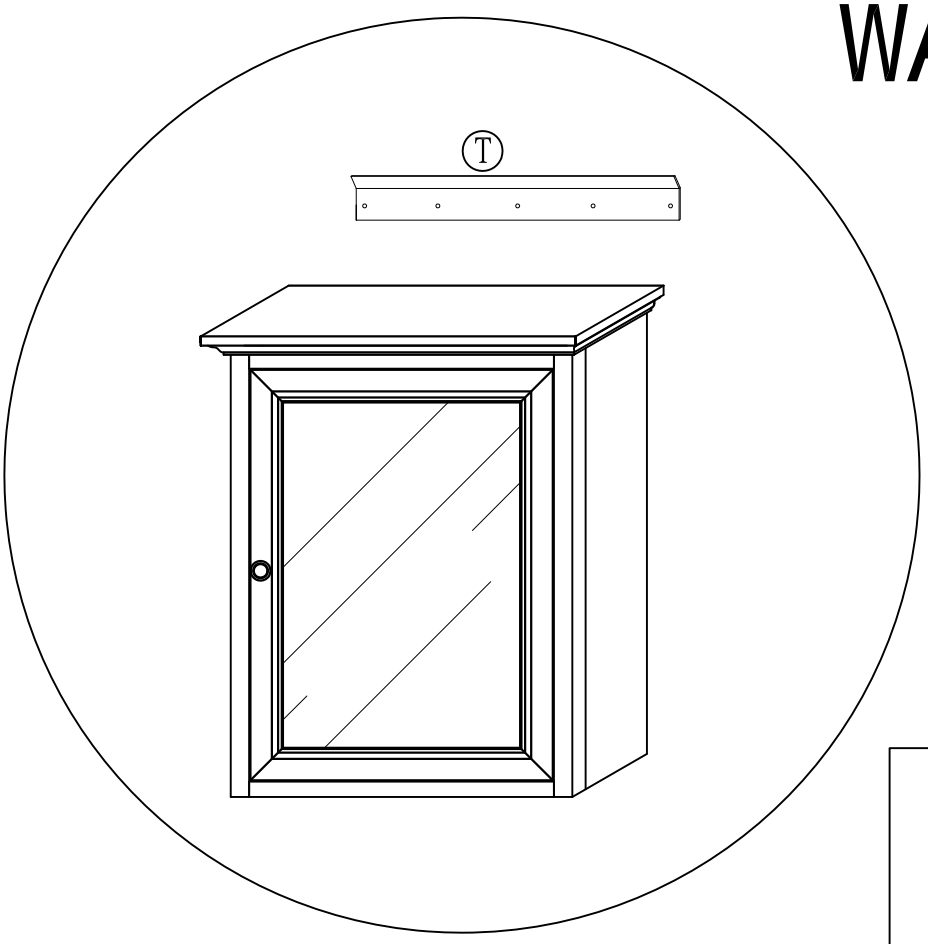

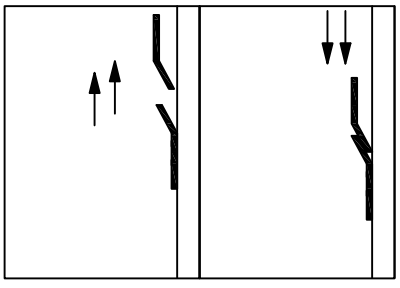

11). ASSEMBLE THE SHEETIRON(T).

- DRILL 5 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 5 GECKOS(V) INTO THE HOLES ON THE WALL. THEN ROTATE 5 SCREWS(U) INTO THE GECKOS(V).
- HANG THE CABINET ONTO THE SHEETIRONS(T).